

# REPLACEMENT SHEET

4/15

50



Exit... Panel... Print... Report... Help

**Users**

User ID: 9999999999999999 Phone: 585 999-9999

Last Name: Smith Dept #: 26

First Name: John SSN: 123-45-6789

Title: Manager

Location: HEAD OFFICES

KeyKeeper Password: password Security Level: 100

Panel PIN: 1234 New PIN

Card Data: Site: 0 Card: 0

New Save Remove Find Delete Exit

Browse Users

**FIG. 4**

# REPLACEMENT SHEET

6/15

60(1)

Panel

Exit... Database Print... Reports Help

Panel ID: 1 Panel Name: Test

Location: MASTER

Install Date: Maintain Date: Also Poll Panel  
☐ Yes  
☒ No

Model: KTD- No. of Keys: 10

Communications Details:

Port No.: 1 Type: Direct Time Offset: 0

Password: none

Messages Sent: 51 Error Count: 51

Reset Count

New  
Save  
Delete  
End  
Exit

Browse Panels - 1 - Test

**FIG. 6**

# REPLACEMENT SHEET

8/15

60(2)

EXIT

File Database Print Reports Help

Panels

General Settings 1 Settings 2 Relays

Timers

Arms Time: 20

Keypad Lockout Time: 10

Door Alarm Inhibit Time: 10

Key Switch Debounce Time: 100

Authense Control Mode: 0

Password Expiry time: 20

Counter / Types

Door Switch Type: Door On

Duress Dial: 3

Wrong Pin Count: 3

Auxiliary Port Mode: Panic Dk

New

Save

Delete

End

Ego


Browse Panels - 1 - Test

**FIG. 8**

# REPLACEMENT SHEET

9/15

60(3)

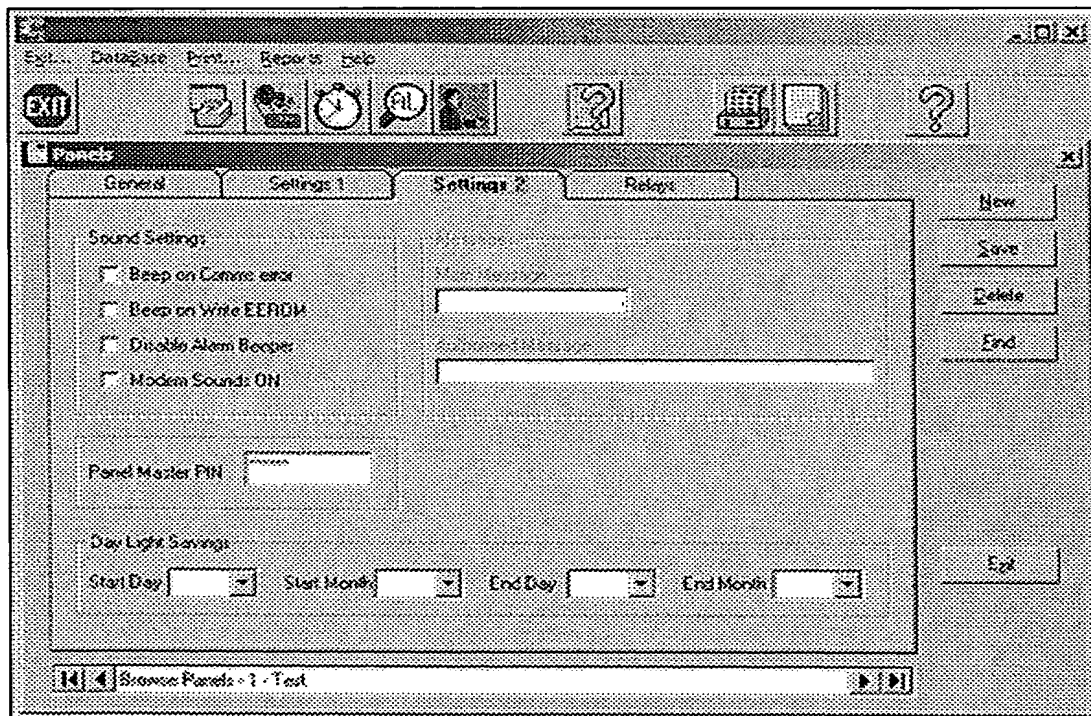


**FIG. 9**

# REPLACEMENT SHEET

10/15

60(4)  
↓

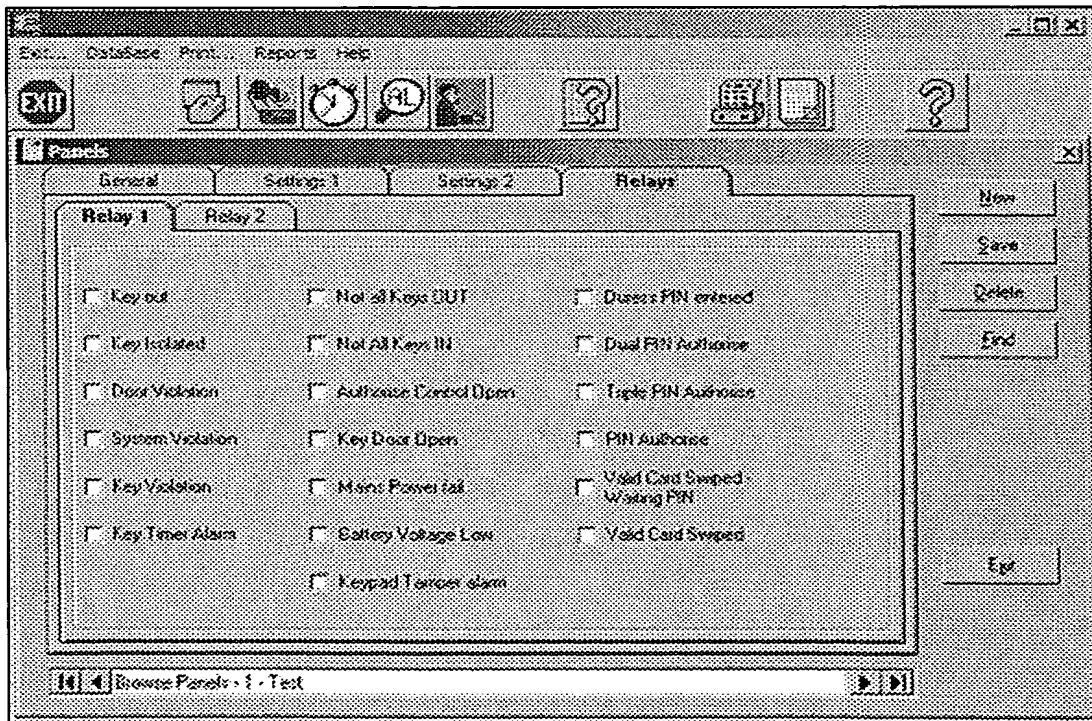

**FIG. 10**

# REPLACEMENT SHEET

13/15

70  
↓

The screenshot shows a software configuration window with a title bar and standard window controls. The window contains several input fields and buttons. On the left, there is a 'Start Party Bt' section with 'Start Bt' (0), 'End Bt' (0), and 'Party Type' (Even). Below this is a 'Site Number' section with 'Start Bt' (2), 'End Bt' (20), and 'Site Default' (0). At the bottom left is an 'Other Options' section with 'ASCII/BCD' (0) and 'Show Site' (1). In the center, there is an 'End Party Bt' section with 'Start Bt' (0), 'End Bt' (0), and 'Party Type' (Even). Below this is a 'Card Number' section with 'Start Bt' (21) and 'End Bt' (39). At the bottom center is a 'Card Data Mask' field with the value '7FFFFFFE'. On the right, there is a 'Card Reader Type' dropdown menu set to 'Casi Busca W40'. At the bottom right are 'OK' and 'Cancel' buttons. The window also features a toolbar with icons for a printer, a document, and a help question mark.

| Section          | Field        | Value          |
|------------------|--------------|----------------|
| Start Party Bt   | Start Bt     | 0              |
|                  | End Bt       | 0              |
|                  | Party Type   | Even           |
| Site Number      | Start Bt     | 2              |
|                  | End Bt       | 20             |
|                  | Site Default | 0              |
| Other Options    | ASCII/BCD    | 0              |
|                  | Show Site    | 1              |
| End Party Bt     | Start Bt     | 0              |
|                  | End Bt       | 0              |
|                  | Party Type   | Even           |
| Card Number      | Start Bt     | 21             |
|                  | End Bt       | 39             |
| Card Data Mask   |              | 7FFFFFFE       |
| Card Reader Type |              | Casi Busca W40 |

**FIG. 13**